

hanging pendants with vertical holes

You will need the following supplies:



Wire Cutters



Flat Nose Pliers




Cone Nose Pliers




Wire



Vertical Hole Pendant

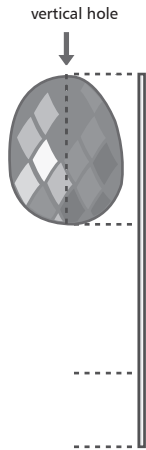


Step 1: Wire length should be at least 2.5 times the length of the hole. There is no need to cut your wire in advance.

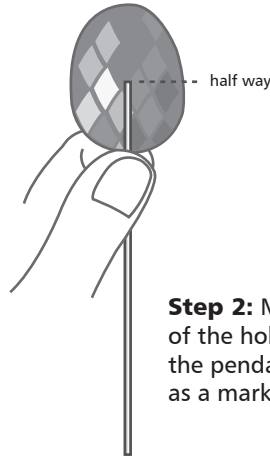


Step 2: Measure half the length of the hole from the exterior of the pendant using your thumb as a marker.




Step 3: Insert wire into the bottom hole of the pendant stopping at your thumb. Bend the wire up toward the top hole.

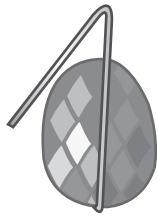


Step 4: With your cone nose pliers, bend the wire down at the top of the pendant leaving 1/4" gap.

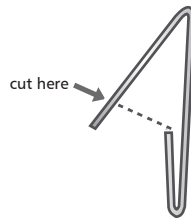

Step 5: Remove the wire from the pendant. With your wire cutters, cut the excess wire to create a full ellipse without any overlap.

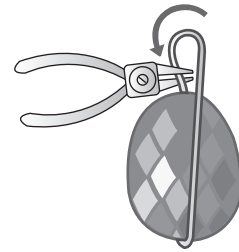


Step 6: Thread the bottom of the wire back into the pendant first and then feed in the top. You may need to use your flat nose pliers to assist you in feeding the wire into the top hole.

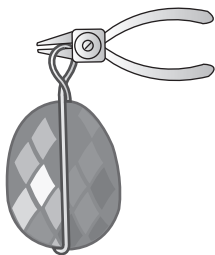

Step 7: Using your cone nose pliers, twist a loop in the 1/4" gap at the top of the pendant.



Step 8: Continue twisting until hand tight.

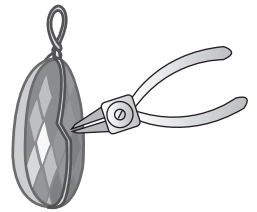

Step 9: For an alternate look, hold your pliers perpendicular to the wire on the exterior of your pendant and twist in a jagged design (this is optional).